


Step 5: Remove the tape holding the shock cord to the disk. Apply a fillet of glue to both sides of the bulkhead. Allow the glue to dry before gluing the coupler into the rocket.

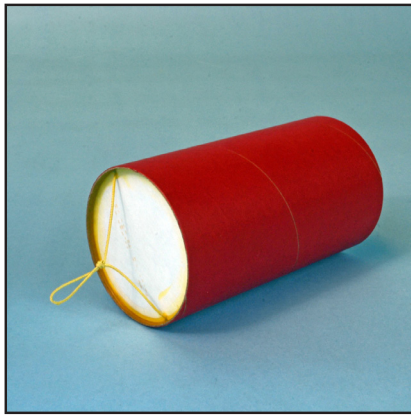


The loop can be used to attach a parachute or shock cord to the base of the coupler.



3355 Fillmore Ridge Heights
Colorado Springs, CO 80907 USA
Phone: 719.535.9335
Fax: 719.534.9050



Foam Core Coupler Bulkhead Disk 41.6mm (Fits BT-60 Couplers)

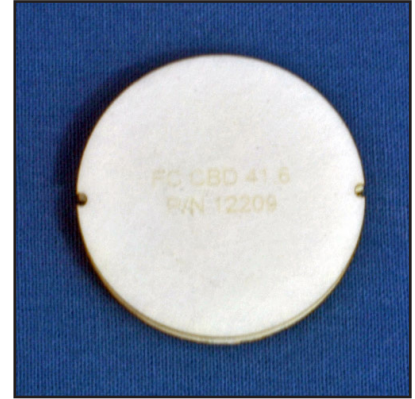


Parts List:


- (1) FCCBD 41.6mm
- (1 ft) 100# Kevlar® Cord




Step 4: Glue the shock cord down along the inside of the tube. Trim off any excess shock cord.

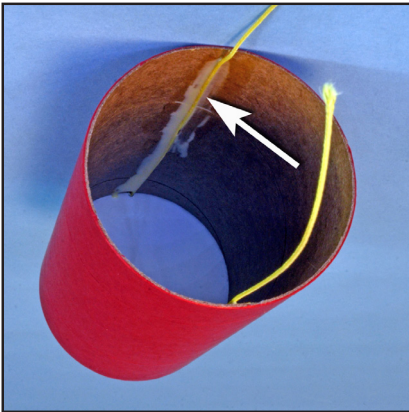

Step 3: Insert the bulkhead disk into the end of the tube coupler. Recess it slightly into the part.

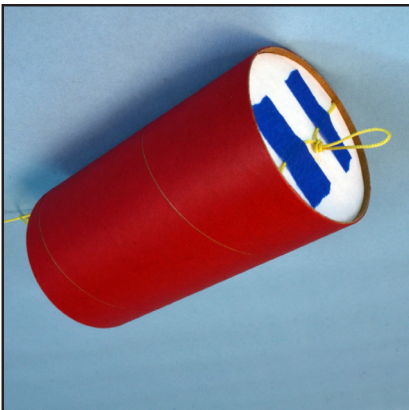

Step 2: Tape the shock cord to the surface of the bulkhead disk, with the loop in the middle, and the ends extending to the notches on the perimeter.

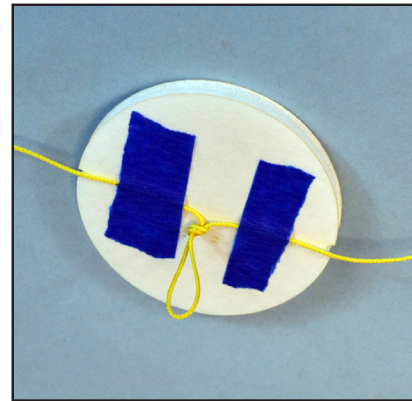

Using the Foam Core Bulkhead Disks
Step 1: Fold the shock cord in half, and tie a loop at the mid-point.

