



Fin Alignment Jigs

For 1/16 inch or 1/8 inch thick fins


1. Make Fin Alignment Jigs from 1/16" thick balsa or bass wood.
2. Print out this page. Tack it down to the wood sheet using 3M Spray Mount™
3. Cut out the pieces using a sharp hobby knife and metal-edged ruler.

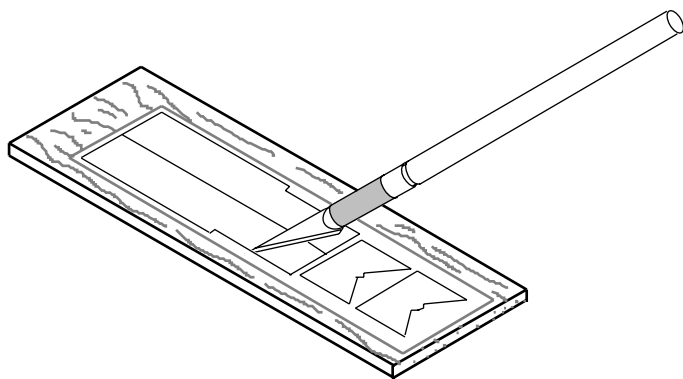


Use this for 1/16 inch thick fins

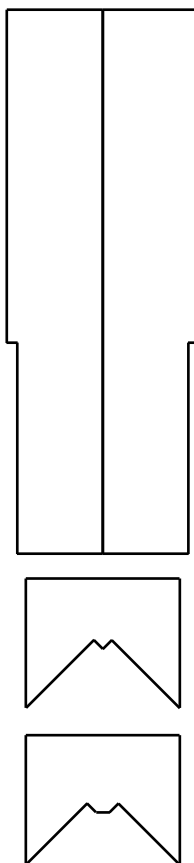


Use this for 1/8 inch thick fins

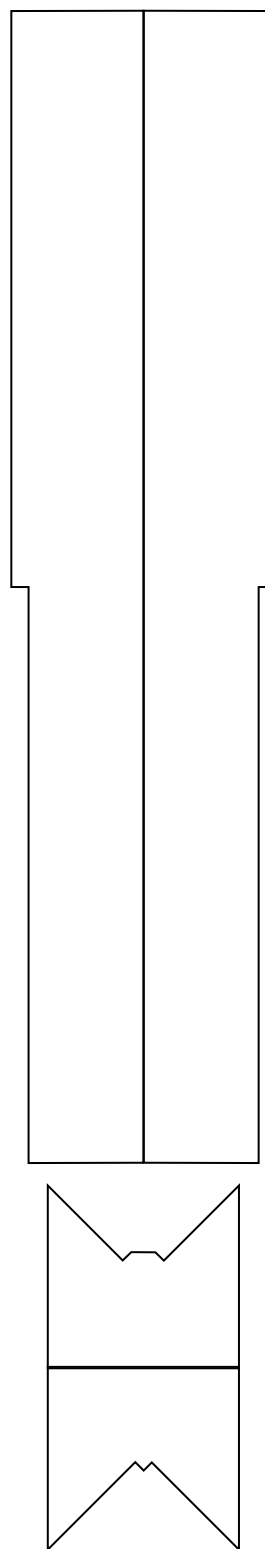

4. Assemble jig as shown. Glue together using wood glue.

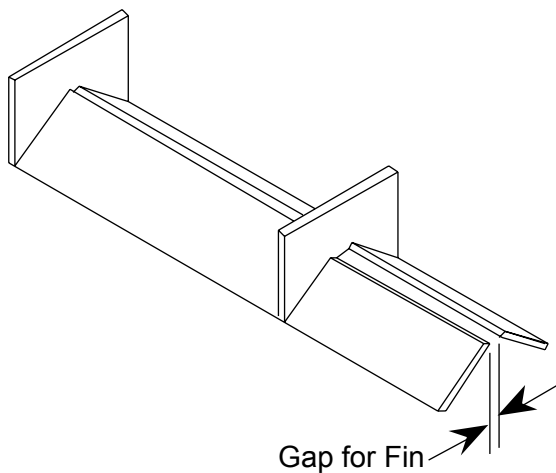

Use fin alignment tool to make sure fin is parallel to body tube

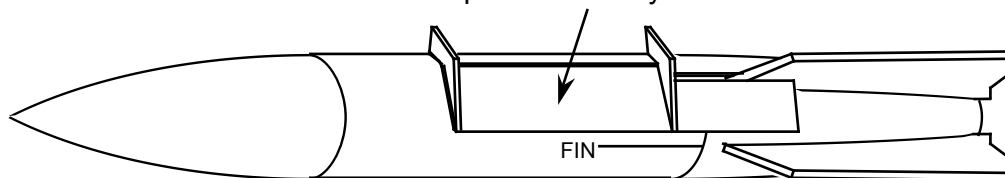

APOGEE
COMPONENTS