


Using the Foam Core Bulkhead Disks




Step 1 (Left): Fold the shock cord in half, and tie a loop at the midpoint.

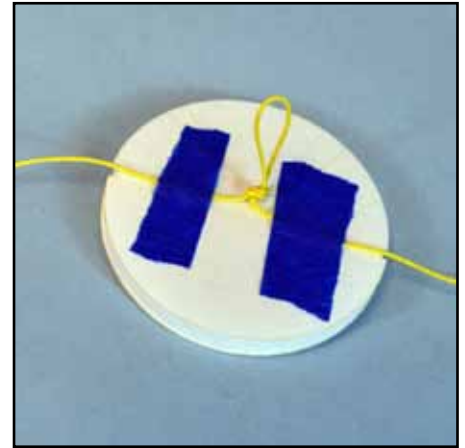


Step 2 (Right): Tape the shock cord to the surface of the bulkhead disk, with the loop in the middle, and the ends extending to the notches on the perimeter.



Step 3 (Left): Insert the bulkhead disk into the end of the tube coupler. Recess it slightly into the part.

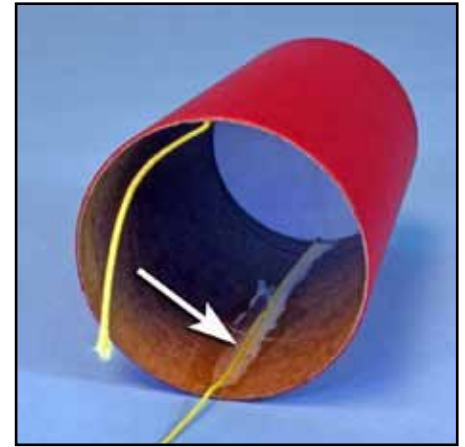

Step 4 (Right): Glue the shock cord down along the inside of the tube. Trim off any excess shock cord.

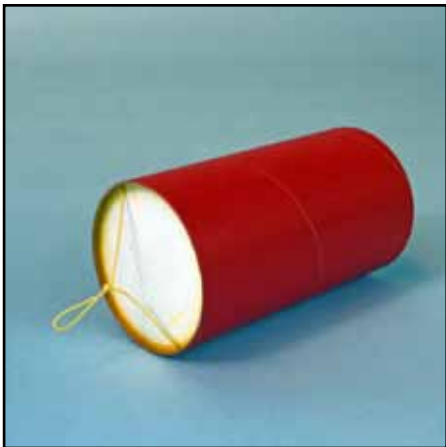

Step 5: Remove the tape holding the shock cord to the disk. Apply a fillet of glue to both sides of the bulkhead. Allow the glue to dry before gluing the coupler into the rocket.

The loop can be used to attach a parachute or shock cord to the base of the coupler.