



# PEAK OF FLIGHT

N E W S L E T T E R

## In This Issue

### ***Designing And Constructing Fins***



**Cover Photo: North Coast Rocketry's SA-14 Archer Rocket Kit. Get one at:**  
[www.ApogeeRockets.com/Rocket\\_Kits/Skill\\_Level\\_3\\_Kits/SA-14\\_Archer](http://www.ApogeeRockets.com/Rocket_Kits/Skill_Level_3_Kits/SA-14_Archer)

Apogee Components, Inc. — Your Source For Rocket Supplies That Will Take You To The "Peak-of-Flight"  
3355 Fillmore Ridge Heights  
Colorado Springs, Colorado 80907-9024 USA  
[www.ApogeeRockets.com](http://www.ApogeeRockets.com) e-mail: [orders@apogeerockets.com](mailto:orders@apogeerockets.com)  
Phone: 719-535-9335 Fax: 719-534-9050

**ISSUE 328 DECEMBER 18, 2012**

## Designing And Constructing Fins

By Tim Van Milligan

{This article comes from the book: *Model Rocket Design and Construction*. You can get more information about the book at: [www.ApogeeRockets.com/Rocket\\_Books\\_Videos/Books/Model\\_Rocket\\_Design\\_And\\_Construction](http://www.ApogeeRockets.com/Rocket_Books_Videos/Books/Model_Rocket_Design_And_Construction)}

Fins should be constructed so that they can withstand the forces expected during flight. The materials and methods of construction determine how much force they can withstand. Very small models do not need very strong fins, and simple cardboard or balsa fins will suffice. Large models and those intended to fly at extremely high velocities will need more strength. The following list gives several materials and construction methods, in order of increasing strength:

- Thick cardboard (not corrugated)
- Balsa wood fins
- Plastic fins
- Balsa wood with paper reinforcing
- Balsa with spruce wood reinforcing
- Built-up fins
- Foam core fins
- Fiberglass reinforced fins
- Plywood


Cardboard is suitable for small rockets using up to a full A rocket motor. Straight balsa wood can be used for rockets of .91 m (3 feet) or less in height, using a maximum of a D engine. Larger rockets or higher-power models should use one of the other techniques or materials. Most of these methods will be described below. Since balsa is a predominant material, the chart below describes the uses for the various thicknesses of balsa available.

If you plan to construct your fins from a solid-sheet material such as cardboard, plastic sheet, or balsa wood,

### Uses for Different Thicknesses of Balsa


0.79 mm (1/32")	Hollow built-up fins
1.59 mm (1/16")	Typical small rockets
2.38 mm (3/32")	Medium-size rockets
3.18 mm (1/8")	Large rockets or clusters; "C" or larger engines
4.76 mm (3/16")	Large cluster engine or heavy models
6.35 mm (1/4")	Generally too thick; high drag

first make a template of the fin shape so it can be transferred to the material. Before marking around the outside of the template with a pencil, orient the balsa sheet so the grain direction in the wood is parallel to the leading edge of the template. This will ensure maximum strength of the fin. If the fin grain is oriented parallel to the body tube, they will be very weak and will snap easily (Fig 6-5). These fins can be fixed by laminating both sides with bond paper as shown in Fig 6-12.

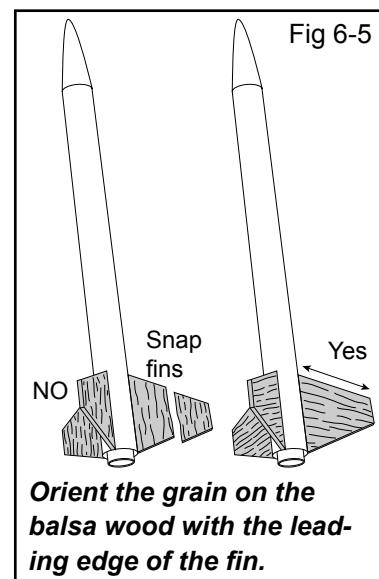

Sometimes it is necessary to make fins out of multiple pieces of wood. Such might be the case if the fin would be wider than a sheet of balsa wood (Fig. 6-6), or if there is an undercut in the fin that would result in a fin that is structurally weak because of the wood grain direction (Fig. 6-7). In either case, cut the wood so that the grain direction is oriented to create a fin with maximum strength.

Fins with straight edges are the easiest to cut because you can use a ruler to help guide the knife. Lay the ruler on top of the fin to protect it if the knife blade should stray away from the ruler when you are cutting. Keep the blade at a 90-degree angle

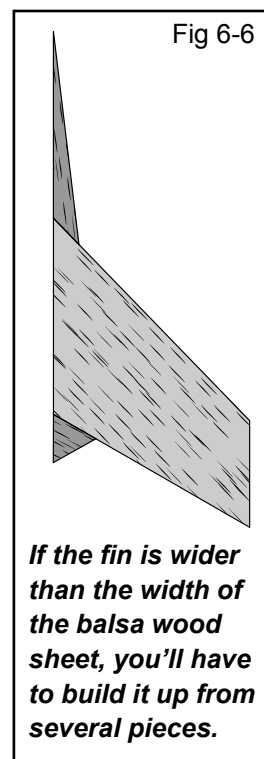

Continued on page 3

### About this Newsletter

You can subscribe to receive this e-zine FREE at the Apogee Components web site ([www.ApogeeRockets.com](http://www.ApogeeRockets.com)), or by sending an e-mail to: [ezine@apogeerockets.com](mailto:ezine@apogeerockets.com) with "SUBSCRIBE" as the subject line of the message.

### Newsletter Staff

**Writer:** Tim Van Milligan  
**Layout / Cover Artist:** Tim Van Milligan  
**Proofreader:** Michelle Mason

Continued from page 2

## Designing And Constructing Fins

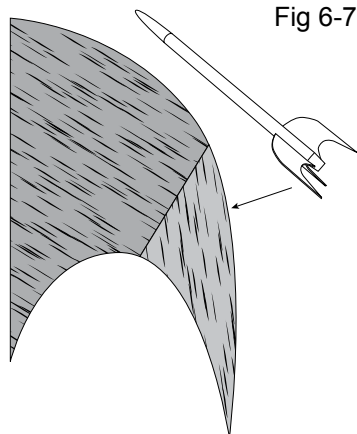


Fig 6-7

**Multiple pieces of wood glued together (called compound fins) should be made for fins that have an undercut to them. Note the wood grain direction.**

Thicker or harder materials such as plywood are more easily cut with a razor saw than with a knife (Fig. 6-9). Use care with a razor saw, since it is much harder to guide the blade and keep the edges straight.

After you've cut all the fins, stack them and sand them all together to ensure uniformity of size and shape. Pay particular attention to the edge that will be glued against the body tube (the root edge). It should be perfectly straight to

to the wood to avoid beveling the edges of the fin (Fig. 6-8). When making cuts, make several light passes instead of one heavy cut. {you can see the technique in video format at: [http://www.apogeerockets.com/Advanced\\_Construction\\_Videos/Rocketry\\_Video\\_1](http://www.apogeerockets.com/Advanced_Construction_Videos/Rocketry_Video_1)}

Curved fin shapes are only slightly more difficult to cut. To ensure maximum uniformity between fins, make a template out of thick styrene sheet and use it to guide your knife blade.

maximize the bond strength of the fin. Also at this time, sand the airfoil into the fin. You might just round the edges, but for minimum drag the fins should be streamlined. Using a small wood planer will drastically cut your sanding time on thick fins.

If you want to have a definite high point on the fin, as would be needed on a scale model, lay a piece of masking tape along the dividing point (Fig. 6-7). If you sand into the tape, remove it and lay a new piece down. This will give a sharp line on the fin.

Finally, give the fin an all around surface sanding. Re-

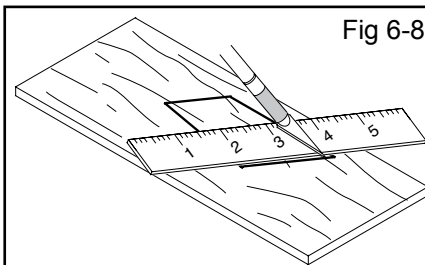


Fig 6-8

**Place ruler on top of fin to prevent it from being sliced if the blade should stray from the ruler's edge**

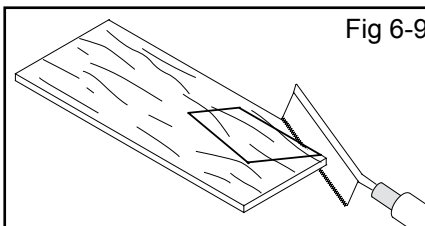


Fig 6-9

**Use a razor saw to cut thick balsa and plywood**


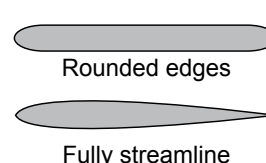


Fig 6-10

**Sanding an airfoil shape will decrease the rocket's drag**

Continued on page 4

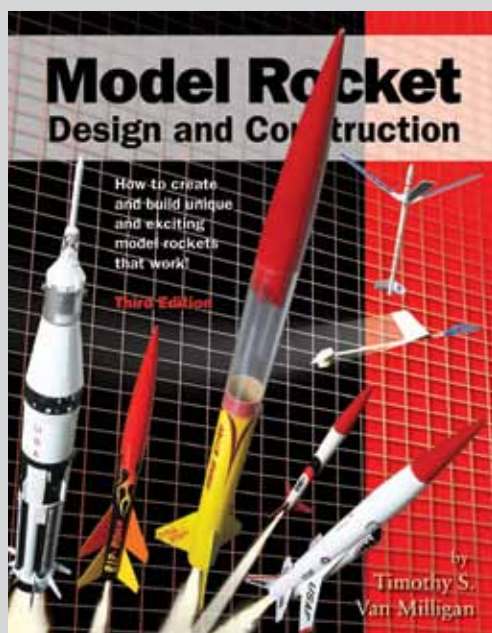

## Model Rocket Design and Construction

By Timothy S. Van Milligan

The Expanded 3<sup>rd</sup> Edition

This massive, 328 page guidebook for serious rocket designers contains the most up-to-date information on creating unique and exciting models that really work. With 566 illustrations and 175 photos, it is the ultimate resource if you want to make rockets that will push the edge of the performance envelope. Because of the number of pictures, it is also a great gift to give to beginners to start them on their rocketry future.

For more information, and to order this hefty book, visit the Apogee web site at: [www.ApogeeRockets.com](http://www.ApogeeRockets.com)

Apogee Components  
3355 Fillmore Ridge Heights  
Colorado Springs, Colorado 80907


telephone: 719-535-9335  
website: [www.ApogeeRockets.com](http://www.ApogeeRockets.com)






Continued from page 3

## Designing And Constructing Fins

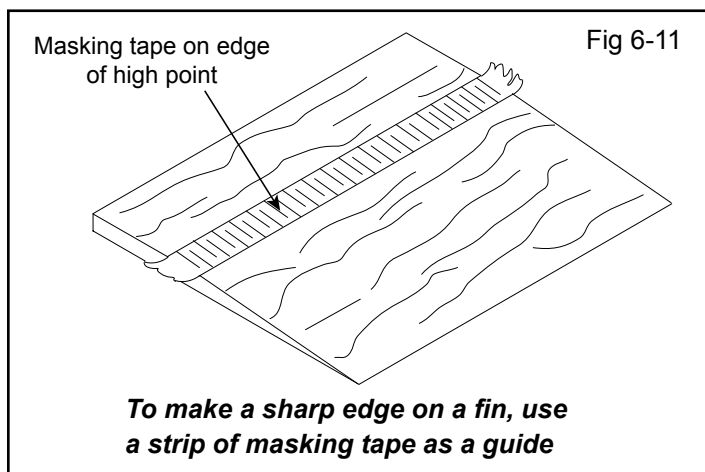

move any lines you drew with ink pens, as they sometimes bleed through the paint on the rocket and ruin its appearance. You may apply sealer to the fins at this time, too. You'll find it easier to sand the fins before they are attached to the body tube.

**Reinforced Balsa Fins:** Balsa fins can be strengthened by providing reinforcement. The additional strength will increase their stiffness and make them more resilient to stress incurred during hard landings. To do this you may either apply skins or add stiffer structural members to the fins.

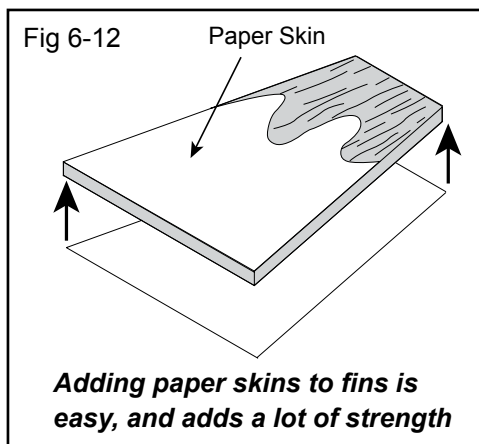


Skins are the easiest to apply; you usually bond them directly to the fins with

wood glue, instant glue, or epoxy. You can make them from a variety of materials, including tissue paper, ordinary notebook paper, cardboard, plastic sheet, very thin plywood, and fiberglass.

Stiff skins are usually applied to flat surfaces, as they are difficult to apply to fins that have airfoils sanded into them. To prevent a balsa wood fin from warping while the glue is drying, place it between two sheets of wax paper and lay a book or other weight on top of it. The waxed paper will protect the table and the book from glue that might ooze out.

Flexible skins that drape, such as tissue paper or fiberglass cloth, are better for curved airfoil sections. Apply tissue paper to fins or wings that need only a little reinforcing or to cover the grain of the wood, and use fiberglass cloth for applying maximum strength to any fin or wing. The methods of application are similar, but the adhesives differ. Tissue paper is commonly applied with model-aircraft dope or wood glue thinned with water. Fiberglass is almost exclusively applied with epoxy, polyester resin, or instant glues.

You can also reinforce balsa fins by strategically adding stronger members to stiffen them. Members placed around the perimeter of the fin are called *caps*, while members placed inside the perimeter are called *spars* or *ribs*, depending on their orientation. *Ribs* lie parallel to the centerline of the rocket, while *spars* extend nearly perpen-

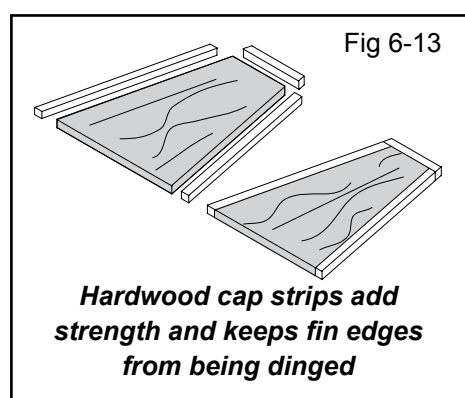

Continued on page 5

## Egg-Payload Protectors

- Soft, flexible foam padding provides superior protection from cracking
- Conforms to the egg to eliminate pressure points
- TARC style places the egg horizontally in the rocket
- Lightweight & reusable



Made by: **Apogee**  
COMPONENTS


www.ApogeeRockets.com

Continued from page 4

## Designing And Constructing Fins


Fig 6-14

Hardwood spar

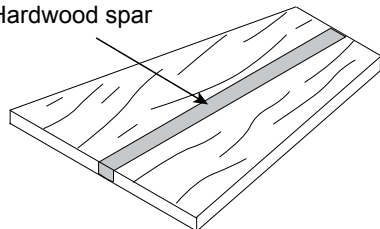

**A simple hardwood spar helps prevent fins from snapping in two**

Fig 6-15

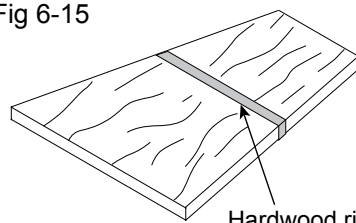


Hardwood rib

**Hardwood ribs prevents fins from splitting along the grain of the balsa wood**

pendicular from the centerline (Figs. 6-13 to 6-15).

**Built-Up Fins:** A strong and lightweight fin, generally made hollow, with judicious placement of high-strength structural members inside an outer skin, is called a built-up fin. The advantages (if it is built properly) are low weight and high strength. Built-up structures are mainly used on large wings or fins, where weight

Fig 6-16

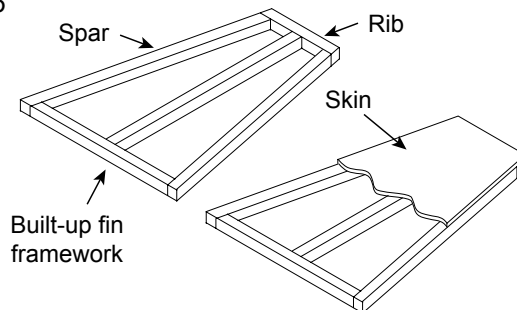

**A simple built-up fin using hardwood strips and a skin of light cardboard or balsa**

Figure 6-16 shows the key parts of a built-up structure. The *spars* carry bending loads, the *ribs* give support and contour shape to the *skins*, and the skin gives the wing an outer cover. When the skin is used to give strength to the structure, the wing is said to have a *semi-monocoque construction*. Skins that can be used effectively this way include balsa sheet, thin plywood sheet, and fiberglass sheet.

This construction is also suitable for fins with sharp leading or trailing edges. The skins on these have to be very thin and stiff; light cardboard, thin fiberglass sheet, or

reduction can be substantial.

Continued on page 6

## High-Power Reload Casings

- Reusable Rocket Motors Save Money
- Holds Aerotech's Reload Propellant
- Sizes: 24mm To 98mm Diameter
- Power Range: E Through N
- Cases For Any Project
- Rouse-Tech Quality
- Affordable!




**www.ApogeeRockets.com**  
Your Source For Everything Rocketry

Continued from page 5

## Designing And Constructing Fins

Fig 6-17

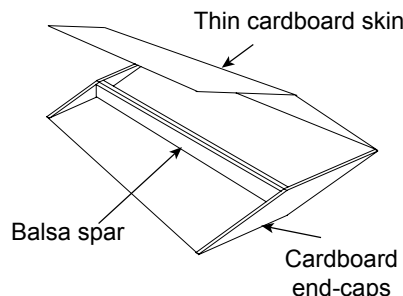

**Wedge-shaped fins are easily made using a built-up method**

thin plywood 0.39 mm (1/64") or 0.79 mm (1/32") work well. Figures 6-13 and 6-14 illustrate how they could be constructed.


### Foam Core

**Fins:** To increase the strength of a built-up wing, without significantly increasing its mass, you can insert expanded polystyrene into the hollow areas. This will add strength and stiffen the skins. The added strength is usually remarkable, so that

many structural members inside the skin can be eliminated, and this decreases the mass of the wing.

Constructing a foam core structure is similar to building a built-up structure. Create a skeleton framework around the fin and cut a piece of foam to fit any hollow area. Shape the foam using a sanding block, so it exactly matches the

Fig 6-15

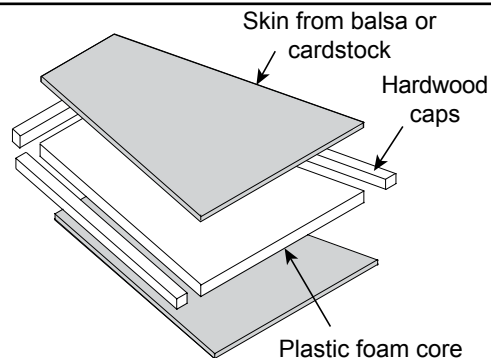

**Foam core fins are good candidates for high power rockets**

perimeter defined by the skeletal framework. Bond the skin directly to the foam and all structural members. Epoxy is usually a safe adhesive to use on foam, but polyester resins and instant glues may melt it.

Again, the type of skin should be appropriate for the expected loads and the shape of the fin. Flat and stiff skins such as light cardboard, thin balsa, thin plastic, or thin plywood are suitable only to fins with flat surfaces. For curved surfaces, fiberglass cloth soaked in epoxy is generally better. Several layers of fiberglass can be added to give extra strength to the fin. This technique is especially applicable to larger and higher-powered rockets.

**Plywood Fins:** Plywood is not usually used as a fin material on small rockets, because it is difficult to cut and shape, and its density is too high for the strength it gives.

Continued on page 7

## Guillotine Fin Alignment Jig

The Most Versatile Alignment Jig Ever Manufactured



- Get Perfectly Aligned Fins Every Time
- Holds the Tube In a Horizontal Orientation to Prevent Glue Drips
- Self Adjusts to ANY Size Tube From 13mm (BT-5) to 66mm (BT-80)
- Securely Holds The Fin While The Glue Dries
- Kid-Friendly! Helps Them Make Stronger Fins, Resulting in Straighter Flights
- Can Accomodate Fins Up To 1/2" Thick
- Allows Any Number of Fins on the Tube

[www.ApogeeRockets.com](http://www.ApogeeRockets.com)

[www.ApogeeRockets.com](http://www.ApogeeRockets.com)



# PEAK OF FLIGHT

Continued from page 6

## Designing And Constructing Fins

For small fins that need accurately shaped airfoils, however, plywood does have some nice characteristics. Use only 0.39 mm (1/64") or 0.79 mm (1/32") thick wood. For fins thicker than this on small rockets, balsa is highly superior.

Plywood is also acceptable for use as a skin on a built-up or foam core fin. When used this way, only thickness of 0.39 mm (1/64") or 0.79 mm (1/32") are acceptable. Thicker than this, it adds too much weight without any significant increase in strength.

Many rocketeers think they need thick, solid plywood fins on larger model rockets and on higher-powered rockets. This is not true. You can make strong and stiff fins with many of the methods described above. The density and weight of plywood outweighs any benefits it might have. Just take your time making the fins and do the job right. Plywood doesn't have the right strength-to-weight characteristics to make a really good fin. Even more important, plywood is so heavy it reduces the safety margin in your rocket designs.

## About The Author:

Tim Van Milligan (a.k.a. "Mr. Rocket") is a real rocket scientist who likes helping out other rocketeers. Before he started writing articles and books about rocketry, he worked on the Delta II rocket that launched satellites into orbit. He has a B.S. in Aeronautical Engineering from Embry-Riddle Aeronautical University in Daytona Beach, Florida, and has worked toward a M.S. in Space Technology from the Florida Institute of Technology in Melbourne, Florida. Currently, he is the owner of Apogee Components (<http://www.ApogeeRockets.com>) and the curator of the rocketry education web site: <http://www.ApogeeRockets.com/education/>. He is also the author of the books: "Model Rocket Design and Construction," "69 Simple Science Fair Projects with Model Rockets: Aeronautics" and publisher of a FREE e-zine newsletter about model rockets. You can subscribe to the e-zine at the Apogee Components web site.

**Need A Parachute?  
We've Got The Right One For You!**



## Rocket Jewelry

- The Perfect Launch-Range Accessory
- Subtle, Tasteful, Fashionable & Distinctive
- Makes A Great Gift for Family and Friends
- Display Your Passion for Rocketry

[www.ApogeeRockets.com](http://www.ApogeeRockets.com)



## We're Paying Cash For Great Articles for This Newsletter

**Are you a writer looking for some serious pocket change? We're paying up to \$350 for good how-to articles for this newsletter. If you're interested, see our submission guidelines on the Apogee web site.**

**[www.ApogeeRockets.com/Newsletter/Newsletter\\_Guidelines](http://www.ApogeeRockets.com/Newsletter/Newsletter_Guidelines)**

